

mm

this page begins: top(X)=0mm, left(Y)=0mm printing the control template

all pages origin (a/1): top(X)=0mm, left(Y)=0mm a/1

Warning : Adobe PDF printer has not been calibrated. This template may not be dimensionally accurate. (press Shift+F5).

tips S1 **set (bend)**

S2

S3

planing S4 **stock gauge**

S5

S6

S7

S8

S9

S10

S11

T1

T2

T3

150

T4

T5

T6

T7

X1 - Z

X2 - Y

X3 - X

intersection FP

X4 - A

blunt nose

X5 - B

X6 - C

X7 - D

X8